

Children's Round Picnic Table (CRPT)




List of fixings

- 4 x 65mm M8 Bolts
- 4 x 55mm M8 Bolts
- 8 x 100mm M8 Bolts
- 16 x Washers
- 16 x Nuts
- 16 x 50mm Green Screws



When assembling, loosely fix together until fully assembled then tighten all the bolts.

1. Lay the table top upside down on a flat level surface (making sure not to scratch the table top), bolt each leg to the left hand side of each block using 4 x 65mm bolts.
2. Bolt cross rail A (notch facing upwards) to the opposite table legs, then slot cross rail B into A and bolt to the remaining legs using 4 x 55mm bolts.
3. Next slot the two centre battens on the seat either side of the cross rail, making sure you line the bolt holes, then using 2 x 100mm bolts connect the seat to the cross rail.
4. Repeat for the other seats.
5. Finally, screw one of each size diagonal braces to either side of the seat attaching it to one of the legs.

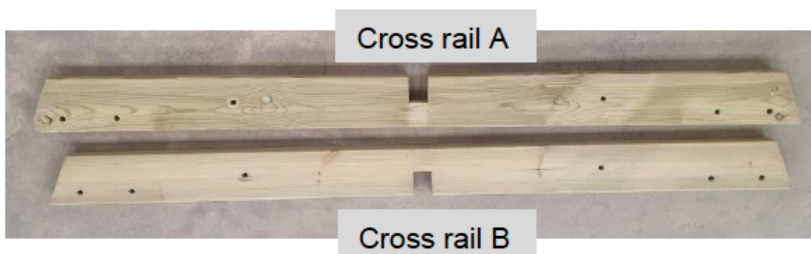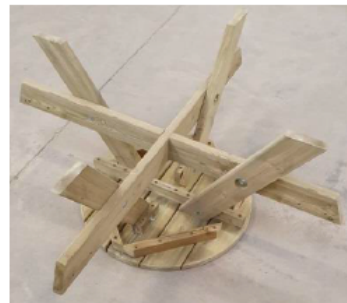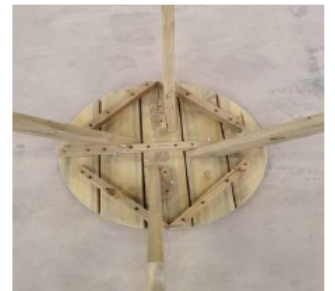

PLEASE NOTE: To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.