

Dartmoor Picnic Table (DART)

List of parts in fixings pack

- 2 x Type A Cross Rail
- 2 x Type B Cross Rail
- 8 x Legs
- 4 x Table Supports
- 8 x Seat Boards
- 1 x Table Top
- 32 x 90mm Screws
- 24 x 60mm Bolts
- 16 x 25mm Caps
- 4 x 120mm Bolts
- 4 x Nuts & Washers
- 2 x Allen Keys



When assembling, loosely fix together until fully assembled then tighten all the bolts.



1. Bolt the leg sections to the cross rails using 60mm bolts and caps **please note there are two of each type of cross rail.**
2. Slot the cross rails into each other.
3. Attach table supports through the cross rails into the inserts in the table support using 60mm bolts.
4. Using 90mm screws, attach seat boards so that they sit flush with the end of the cross rails, parallel to the table.
5. Carefully place table top onto the table supports and fix with 120mm bolts, nuts and washers.

PLEASE NOTE: To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.