

DEAN Companion Seat (DCS)

List of parts in fixings pack

- 24 x 60mm Connecting Bolts**
- 24 x 25mm Connecting Caps**
- 2 x Allen Keys**
- 4 x 90mm Screws**
- 4 x Surface Cup Washers**



When assembling, loosely fix together until fully assembled then tighten all the bolts.

1. Bolt four legs to the two armrests (as shown in the picture) using one 60mm bolt and one 25mm cap for each leg.
2. Using four 60mm bolts & caps, fix one leg set to the outside of each seat with the notch in the armrest facing inwards.
3. Fix two loose legs onto the inside side of each seat in the same manner as 2.
4. Drop the table over the loose legs and bolt together using 60mm bolts.
5. Slide the two backrests into position and bolt together using 60mm bolts. Then tighten all bolts.
6. Finally turn product over and screw the brace to the underside of each seat, using four 90mm screws.



PLEASE NOTE: To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.