

Melrose Dining Set (DSM)

List of parts in fixings pack

32 x 90mm Screws

 
 
List of parts

1 x Table Top
2 x Table Leg Sets
2 x Seat Sections
4 x Seat Legs
2 x Table Cross Brace



When assembling, loosely fix together until fully assembled then tighten all the fixings.

1. Place the table top upside down on a clean level surface. Taking care to protect the table top from scratching.
2. Slot in a leg set on either side making sure that the leg braces are facing inwards.
3. Through the braces attached to the table screw into each leg using 3 screws in each leg.
4. Turn table the correct way up and slot the cross brace onto the leg braces. Screw into place through the pre-drilled holes.
5. Place seat board upside down on a clean level surface. Taking care to protect the seat boards from scratching.
6. Slot in a leg set on either side making sure that the leg braces are facing inwards.
7. Through the braces attached to the legs screw into each seat using 3 screws.

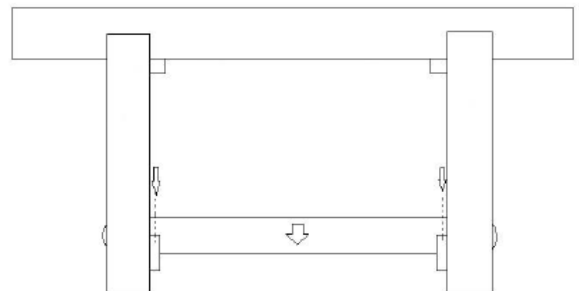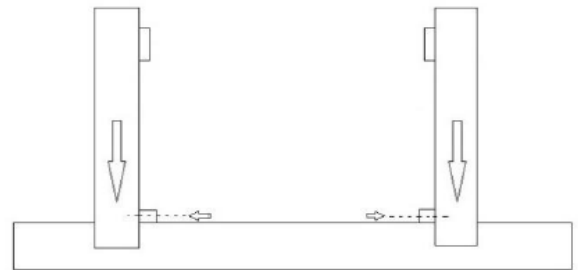

PLEASE NOTE: To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.