

## Economy Picnic Table (EPT)

### List of parts in fixings pack

- 8 x 60mm M8 Bolts**
- 6 x 25mm Connection caps**
- 16 x 60mm Green Screws**
- 2 x Allen Key**



When assembling, loosely fix together until fully assembled then tighten all the bolts.

1. Place the table top upside down on a flat surface, taking care to protect the top from scratching.
2. Place leg set inside of the outer batten of the table top and bolt loosely through the two outer holes.
3. Fix the diagonal brace between the leg set and the insert of the table top. Bolt together loosely.
4. Repeat for the other leg set.
5. Turn the table over and place the seat sections into desired position on the cross braces and screw through pre-drilled holes using 60mm screws.
6. Tighten all of the fixings.

**PLEASE NOTE:** To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.