

## Commercial Rectangular Picnic Table with folding seats (LRAF)

### List of parts in fixing pack

- 14 x 60mm Connecting Bolts
- 10 x 25mm Connecting Caps
- 2 x Allen Keys



When assembling, loosely fix together until fully assembled then tighten all the bolts.

1. Carefully place the table top upside down, taking care to protect the top from scratching.
2. Attach one leg set inside of the batten and bolt loosely through the three holes using 60mm bolts.
3. Place a diagonal brace between the leg set and insert into the table top, making sure the insert is in the brace facing the leg. Bolt together loosely using 60mm bolts.
4. Repeat step 2 and 3 for the other leg set.
5. Turn the table over and place the seats on, in the same way as the table top, bolt together loosely using 60mm connecting bolts and 25mm connecting caps.
6. Finally tighten the bolts.

**PLEASE NOTE:** To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.