

Assembly Instructions

Six-Seater Round Picnic Table (SSR)

List of parts in fixings pack

16 x 95mm Bolts 30 x 60mm Bolts 30 x 25mm Caps 2 x Allen Keys 6 x 90mm Green Screws 6 x 50mm Green Screws



When assembling, loosely fix together until fully assembled then tighten all the bolts.

- First start by assembling the cross rails. Bolt one of the table supports between one long and one short cross rail (making sure the longest points are on the outside) using 95mm bolts and caps. (See images A,B,C,D and E)
- 2. Repeat for the other two.
- 3. Screw the three longer cross rail sections together through the pre-drilled holes using two 90mm screws in each section. Now using the 50mm screws, screw in the shorter cross rails through the pre-drilled holes into the longer sections. (See images A,B,C,D and E)
- 4. Now the cross rails are assembled place the table top upside down on a flat surface taking care to protect the table top from scratching.
- Carefully turn the cross rail upside down and line up the three table supports to the table blocks and bolt on using 60mm bolts and caps provided. (We suggest having assistance from other people for this part.)
- 6. Take your seats and bolt them to the ends of the cross rails using two 95mm bolts and caps.
- 7. Taking the seat legs, these are right hand and left hand depending on the position of the threaded insert, bolt to the outside of the seat blocks using two 60mm bolts and caps.
- 8. Next bolt the diagonal braces between the leg and seat base using two 60mm bolts and locating them in the threaded inserts.
- 9. Tighten all the remaining loose bolts. Turn the table over and place into position. (We suggest having assistance from other people for this part.)

PLEASE NOTE: To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.



Assembly Instructions





PLEASE NOTE: To minimise twisting and warping all garden furniture products are recommended only be used on firm level ground. Softwood is a natural material, which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear, it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack, once dry sand the area lightly. This will not affect the treatment of the product.